

Only one earth connection is required on the switch. Use either terminal 2 or 4 for the earth.

Illuminated switches only light up when the switch is in the 'On' Position. Always use a fused ignition fed supply. Always use a relay for heavy current draw accessories.